



STEPABOVE[®] STEPS

OWNER'S MANUAL

GEN II



Above. Beyond. Always.

574.293.1581
www.MORryde.com

STEPABOVE® STEPS

INTRODUCTION

Internally storable RV entry/exit step system with a weight rating of 500 lbs.

Note: Steps should only be lowered or raised/stowed from **OUTSIDE** of the RV.

Note: Use caution when ascending and descending the steps at all times.

⚠ WARNING – Never raise/stow steps with yourself or anyone in the RV as this blocks an emergency exit and may result in personal injury to you and/or others.

⚠ WARNING – Never attempt to lower steps from inside the RV as this may result in personal injury to you and/or others.

⚠ WARNING – Never attempt to use the steps without ensuring both step legs are firmly on the ground with the foot pads in the correct orientation. Ensure legs are adjusted properly so that the step is level; failure to do so may result in personal injury to you and/or others.



WARNING – Numerous pinch points exist at door, step and threshold. KEEP CLEAR.



Above. Beyond. Always.

574.293.1581
www.MORryde.com

OPERATING INSTRUCTIONS

LOWERING STEPS

1. Ensure the area around the steps is free of any obstruction that may cause injury or damage to the steps.
2. From the outside of the RV, open the entry/exit door all of the way.
3. Disengage the step/doorway retention latch.

Note: The retention latch release will occur one of two ways:

- a. Left side of steps – Firmly grasp the blue grip on the latch release and pull to the right with sufficient force to disengage the retention latch from the door flange.
 - b. Center of steps – firmly grasp the blue grips on the handle and twist in clockwise motion until the doorway retention latches disengage from the door flange.
4. Lower the steps into position ensuring hands-on positive control of the steps is maintained all the way to the ground.

⚠ WARNING

Failure to maintain hands-on positive control of steps while lowering or raising may result in serious personal injury.

Note: The bottom of the hinge plate should rest on the top of the door threshold; obstructions under the plate that prevent this could interfere or damage the steps or door.

5. Depress the step leg adjustment button on both the left and right side of the steps allowing the extension legs to telescope down/out far enough to level the steps.
6. Once the steps are level, release each of the adjustment buttons and ensure that they return to their locked position.
7. Place one foot on the bottom step and apply a minimal amount of weight to ensure that both left and right legs have properly seated into place. Ensure the steps are stable and level.
8. Proceed to using steps.

RAISING & STOWING STEPS

1. Open the RV entry/exit door all the way. Failure to do so before lifting the step may result in damage to the unit and/or step and/or personal injury.
2. Ensure that the RV is not occupied.
3. Ensure that any potential obstructions in and/or around the doorway have been cleared/properly stowed.

STEPABOVE® STEPS

OPERATING INSTRUCTIONS, CONTINUED

RAISING & STOWING STEPS

4. Grasping the bottom step, raise the steps far enough off the ground to access and depress the leg adjustment buttons.

Note: From this position it is good practice to visibly inspect each of the legs to ensure that they are free of mud or any other debris that may impact the ability for them to be properly retracted.

5. With each of the buttons depressed, slide the left and right leg extension back into their respective channel.
6. While maintaining positive control of the steps slowly lift and walk forward allowing the steps to raise and come to rest in the doorway of the RV.
7. Ensure that the retention latch(es) have properly engaged the door flange and are securely in place.

⚠ WARNING Never let go of or remove positive control of the steps until you are certain that the latches have properly engaged and steps are securely in place.

⚠ WARNING Should difficulties arise in getting the latch to engage the door flange, enlist the assistance of another person to engage/adjust the latch as the steps are held in place, or lower the steps back to the ground until such assistance becomes available. Great personal injury can occur from unsecured falling steps so **NEVER** let go of or walk away from steps that are in the raised position, but not secure.

MAINTENANCE

1. Periodically inspect clean the extension legs, feet, and internal slide channels to ensure they are free of mud and/or any debris that could obstruct/impede the movement or smooth operation/locking of the extension legs.
2. With the steps in the raised/secured position, periodically inspect/clean the area between the hinges and the bottom of the doorway to ensure any dirt/debris build-up that could obstruct and smooth operation of the steps being lowered/raised is removed.

WARRANTY / CUSTOMER SERVICE

Visit www.MORryde.com for warranty information. Have questions? Contact the Parts Department at **574-293-1581** or email parts@morryde.com.

StepAbove® Steps | Version 6



Above. Beyond. Always.

574.293.1581
www.MORryde.com