


ROUTINE I.S. MAINTENANCE

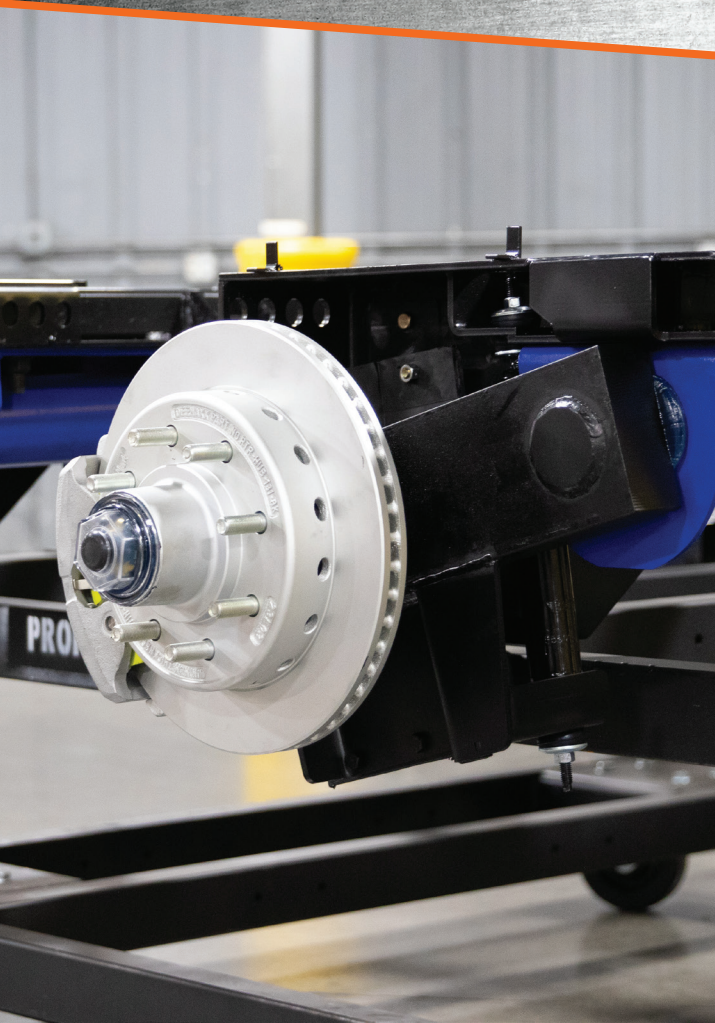

BEARING & TORQUE BRACKET SERVICE

How often should I re-pack my bearings?

Every 12,000 to 15,000 miles or 1 time a year,
whichever comes first.

How often should I grease my torque brackets?

Every 10,000 miles or 1-2 times a year,
whichever comes first.


What kind of grease do you use for the bearings and the torque brackets?

MORryde recommends using a high-quality, multipurpose, extreme pressure (EP) lithium complex grease for automotive wheel bearing use. It should be NLGI GC-LB certified and NLGI Grade 2. MORryde uses Kendall L-427 Super Blu #2.

**Bearing Packing
Instruction Video**



**Pre-Trip
Inspection Video**

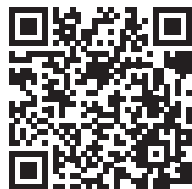

**General I.S.
Inspection Info Video**

