



FLIP TREAD STEP

OWNER'S MANUAL



STP-215
STP-217



Above. Beyond. Always.

574.293.1581
www.MORryde.com

FLIP TREAD STEP

OWNER'S MANUAL

CONTENTS

Introduction	2
Lowering Steps	3-4
Raising & Stowing Steps	5-6
Maintenance & Warranty	7



Above. Beyond. Always.

574.293.1581
www.MORryde.com

FLIP TREAD STEP

INTRODUCTION

Self-contained flip up/flip down step tread RV entry/exit step system with a 400 lb weight capacity.

Note: Steps should only be lowered or raised/stowed from **OUTSIDE** of the RV.

Note: Use caution when ascending and descending the steps at all times.

⚠ WARNING – Never lower or raise/stow steps from the inside of the RV as this can result in great personal injury to yourself and/or others.

⚠ WARNING – Never raise/stow steps with yourself or anyone in the RV as this blocks a(n) emergency exit and may lead to personal injury to you and/or others.

⚠ WARNING – Never attempt to use the steps without ensuring both step legs are firmly on the ground with the foot pads in the correct orientation. Ensure legs are adjusted properly so that the step is level; failure to do so may lead to personal injury to you and/or others.



WARNING – Numerous pinch points exist at door, step and threshold so KEEP CLEAR of these areas during setup and take down.



FLIP TREAD STEP

OPERATING INSTRUCTIONS

LOWERING STEPS

STEP 1

Ensure the area around the steps is free of any obstruction that may cause injury or damage to the steps.



STEP 2

From the outside of the RV, open the entry/exit door all of the way.



STEP 3

Disengage the step retention latch located on the left side of the steps.



Firmly grasp the blue grip on the latch release and pull to the right with sufficient force to disengage the retention latch from the door flange.

STEP 4

Lower the steps into position ensuring positive control of the steps is maintained all the way to the ground.



Above. Beyond. Always.

574.293.1581
www.MORryde.com

FLIP TREAD STEP

OPERATING INSTRUCTIONS, CONTINUED

LOWERING STEPS, CONTINUED

STEP 5

Remove pin from one leg extension and level the steps, then reinsert the extension pin. Next remove the pin from the other leg extension, bring to level, and reinsert the pin.

STEP 7

Proceed to using steps in their intended manner with care and caution.



STEP 6

Place one foot on the bottom step and initially apply a minimal amount of weight to ensure that both left and right legs have properly seated into place and have compacted the substrate underneath them enough to ensure the system is stable.

Note: As initial weight is applied, make any leg adjustments needed to ensure that the steps are level and stable prior to using the steps.



FLIP TREAD STEP

OPERATING INSTRUCTIONS, CONTINUED

RAISING & STOWING STEPS

STEP 1

Open the RV entry/exit door all the way. Failure to do so before lifting the step may result in personal injury or damage to the door or step.

STEP 3

Ensure that any potential obstructions in or around the doorway have been cleared and properly stowed.

STEP 5

If necessary for the step to fit in the doorway, raise the steps far enough off the ground to remove the leg adjustment pins. With each of the pins removed, slide the left and right leg extension back into their respective channels and replace each of the adjustment pins.

Note: From this position, it is good practice to visibly inspect each of the legs to ensure that they are free of mud or any other debris that may impact the ability for them to be properly retracted.



STEP 2

Ensure that the RV is not occupied.

STEP 4

Flip the treads into the up position.



Above. Beyond. Always.

574.293.1581
www.MORryde.com

FLIP TREAD STEP

OPERATING INSTRUCTIONS, CONTINUED

RAISING & STOWING STEPS, CONTINUED

STEP 6

While maintaining positive control of the steps, walk forward allowing the steps to raise and come to rest in the doorway of the RV.



STEP 7

Ensure the door retention latch has properly engaged the door flange and are securely in place.



Note: Never let go of or remove positive control of the steps until you are certain that the latches have properly engaged and steps are securely in place.

Note: Should difficulties arise in getting the latch to engage the door flange, enlist the assistance of another person to engage/adjust the latch as the steps are held in place, or lower the steps back to the ground until such assistance becomes available. Great personal injury can occur from unsecured falling steps, so **NEVER** let go of, or walk away from steps that are in the raised position, but not secure.

FLIP TREAD STEP

MAINTENANCE

CLEANING & INSPECTING

STEP 1

Periodically inspect and clean the extension legs, feet and internal slide channels to ensure they are free of mud and/or any debris that could obstruct/impede the movement or smooth operation of the extension legs.



STEP 2

With the steps in the raised/secure position, periodically inspect/clean the area between the hinge(s) and bottom of the doorway to ensure any dirt/debris build-up that could obstruct and smooth operation of the steps being lowered/raised is removed.



WARRANTY

Please visit www.MORryde.com for warranty information.

If you have questions about the installation process, please contact our Parts Department at **574-293-1581** or email parts@morryde.com for assistance.

FLIP TREAD STEP | Version 10



Above. Beyond. Always.

574.293.1581
www.MORryde.com