


# ROUTINE I.S. MAINTENANCE

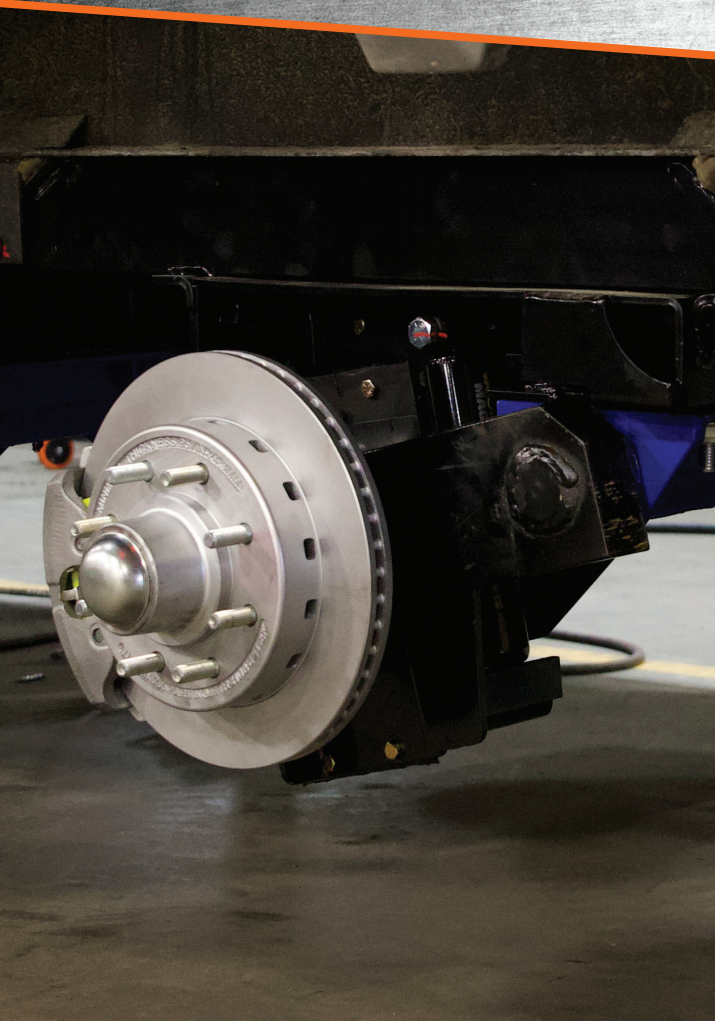

## BEARING & TORQUE BRACKET SERVICE

### How often should I re-pack my bearings?

Every 12,000 miles or 1 time a year,  
whichever comes first.

### How often should I grease my torque brackets?

Every 6,000 miles or twice a year,  
whichever comes first.


### What kind of grease do you use for the bearings and the torque brackets?

MORryde recommends using a high-quality, multipurpose, extreme pressure (EP) lithium complex grease for automotive wheel bearing use. It should be NLGI GC-LB certified and NLGI Grade 2.

**Bearing Packing  
Instruction Video**



**Pre-Trip  
Inspection Video**

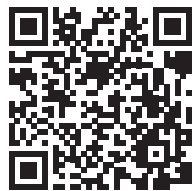

**General I.S.  
Inspection Info Video**

