

CRE3000 TANDEM

INSTALLATION INSTRUCTIONS



The MORryde **CRE3000** is the affordable way to upgrade your 5th wheel or travel trailer. By replacing the steel equalizers with shock-absorbing rubber compression springs, the **CRE3000** allows up to 3.0" of total suspension travel.

PARTS LIST:

- (2) **CRE3000** Equalizers

TOOLS REQUIRED:

- Torque Wrench
- 11/16" or 3/4" Socket & 13/16" Wrench
- Floor Jacks
- Safety Stands
- Ratchet


INSTALLATION:

Step 1

Loosen all lug nuts. Using appropriately rated jacks, raise the unit and support the frame with safety stands. Support the axles with floor jacks and remove all wheels.


Step 2

Remove the shackle links from the equalizer, then remove the shoulder bolt from the frame hanger.

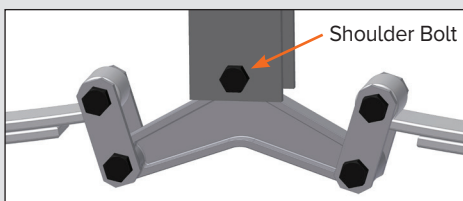

Step 3

Replace the stock equalizer with the CRE3000. Use a hammer to tap the shoulder bolt into the frame hanger. If it has a grease zerk, use a small diameter socket to fit over the zerk and tap the bolt in place or remove the zerk, tap the bolt in place, and reinstall the zerk. Make sure the grease exit hole faces the 3 or 9 o'clock position for proper grease flow. Reinstall the shackle links and tighten all nuts to 40 ft-lbs. Use a 13/16" wrench to hold the bolt in position while tightening the nuts with an 11/16" or 3/4" socket. If a 3/4" socket is being used to tighten 1/2-20 nuts onto the wet bolts, torque to 80 ft-lbs.

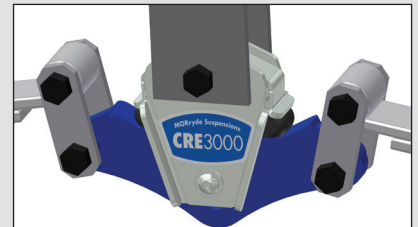

Step 4

Reinstall all wheels, then remove the jacks and supports from the frame and axles. Torque all lug nuts according to manufacturer specifications.

If you have any questions regarding the installation procedure or have difficulty with any of the steps, please give us a call at **574-293-1581** or email parts@morryde.com.



Above. Beyond. Always.

574.293.1581 • MORryde.com