

QUICK CONNECT STEP

PRE-INSTALLATION INSTRUCTIONS


Will the Quick Connect Step work for your RV? Please review the steps below.

STEP 1 MOUNTING SPACE
Measure the space between the bottom of the threshold and the opening for the current steps. A minimum distance of 1.75" is required to attach the steps.




NOTE: The steps will not work for doors with trim under the threshold.

STEP 2 INTERNAL FRAMING
The brackets require structural reinforcement **behind** the skirt metal and below the threshold. Units that do not have any reinforcement for the brackets will require modification. For questions contact our Parts Department at 574-293-1581.

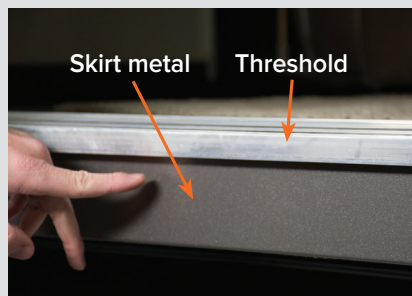

STEP 3 STEP HEIGHT
Measure from the top of the threshold to the ground. Refer to the Fit Chart below for the corresponding Quick Connect Step part number.

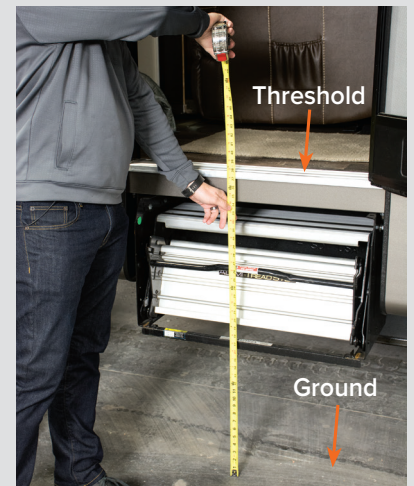

If you have met the requirements above, use the dimensions from Step 3 to locate your part number in the fit chart below.

FIT CHART

	PART NUMBER	STEP HEIGHT	STEP RISE
2 STEP	STP-221	21.5" – 27.5"	9"
3 STEP	STP-222	27.5" – 36"	8"
4 STEP	STP-223	35.5" – 44"	8"

STEPMates

Navigating Your RV Steps Made Easy

Products designed to work with your steps for added safety, storage and convenience.



3 STEP HANDRAIL
STP214-121H

4 STEP HANDRAIL
STP214-120 H

SCAN THE QR CODE TO VIEW MORE STEPMATE PRODUCTS.



Above. Beyond. Always.

INSTALLATION INSTRUCTIONS

Please take a moment to review the **Quick Connect Step Pre-Installation Instructions** on the front side of this form before proceeding with these Installation Instructions.

TOOLS REQUIRED: 3/8 drive socket

STEP 1


Line up the first bracket with the outside edge of the door. Verify the placement of the bracket by properly positioning the steps; also confirm clearance of the door. If satisfactory, use a 1/8" bit to pre-drill the holes for the screws. Next, install the first mounting bracket using the supplied hardware.



NOTE: *The two brackets are identical.*

STEP 2

Adjust the leg height for proper installation of the step.

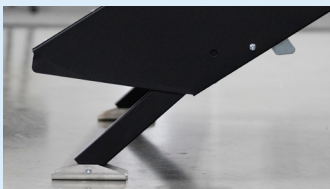

The new patio step legs have the adjustable paddle latch like the **StepAbove®** RV entry steps.

STEP 3

Press in the mushroom head handle and attach the step to the pin on the bracket that was first installed; you will use this as a guide for the location of the second bracket. With the steps in position, mount the second bracket.



TO RELEASE THE STEPS:

Press in the mushroom head handles and pull back to remove the step from the mounting brackets.

⚠ WARNING Improper installation may cause property damage or personal injury. The Installer assumes all responsibility of verifying the safety and viability of any installation method and mounting surface. MORryde is not liable for property damage or injury caused by incorrect mounting, installation methods not recommended by MORryde, hardware not provided by MORryde, or incorrect use during travel or otherwise.

If you have any questions, please give us a call at **574-293-1581** or send an email to **parts@MORryde.com**.



Above. Beyond. Always.

Please contact us if you have any questions.
574-293-1581 | www.MORryde.com