



JLU Trail Kitchen Accessory: **JP54-055**

BOLT-IN KIT

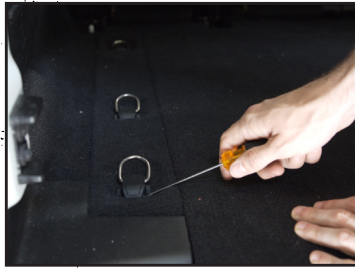


INSTALLATION INSTRUCTIONS

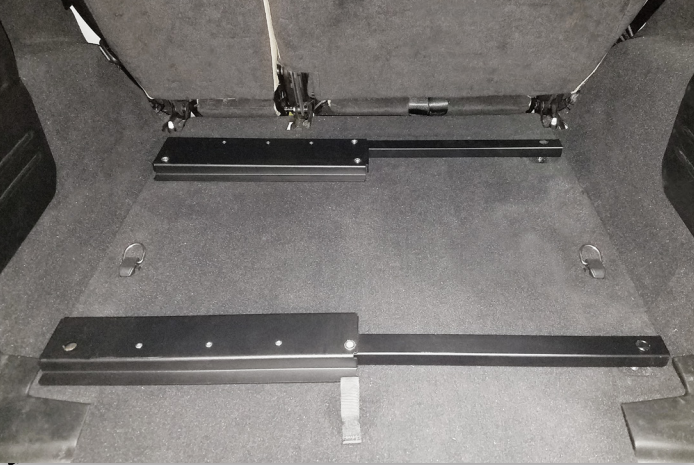


STEP 1

Using a standard (flat head) screwdriver, carefully open plastic housing covering the Torx bolts fastening the front-most and rear-most OEM D-Rings to the floor of the Jeep.

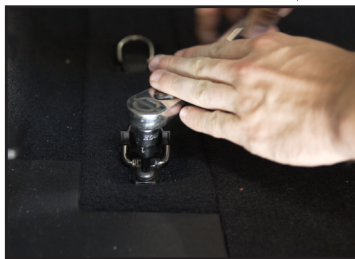

STEP 2

Using a T45 Torx socket, remove the bolts fastening the front-most and rear-most, OEM D-rings to the floor of the Jeep.

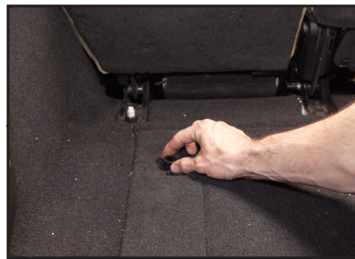

STEP 3

Place (1) $\frac{3}{4}$ " long spacer over each factory rivnut where the D-Rings were located previously.



STEP 4

Line up holes in bolt-in brackets with the (2) factory rivnuts and spacers located behind the rear seat and at the rear of the Jeep, where the factory D-rings were removed.



STEP 5

Fasten bolt-in brackets to factory rivet nuts in the floor of the Jeep using supplied M8-1.25 x 50mm bolts and lock washers.

ATTENTION:

It is recommended that you start all bolts into their corresponding rivet nuts in the floor of the Jeep, but do not fully tighten them until they are all started.

MORryde

HEAVY. DUTY. ADVENTURE.

www.MORryde.com • 574.293.1581

BOLT-IN KIT




INSTALLATION INSTRUCTIONS



STEP 6

Place supplied plastic covers in the access holes located on the bolt-in brackets to hide hardware.

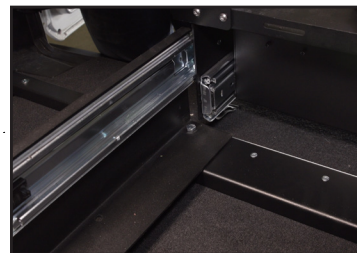

STEP 9

Ensure that all hardware is properly secured and your Trail Kitchen is ready to enjoy!



STEP 7

Place MORryde Trail Kitchen on bolt-in brackets and align the hole pattern in the bottom of the Trail Kitchen with the rivet nuts in the bolt-in brackets.



STEP 8

Secure Trail Kitchen to the bolt-in brackets using supplied 5/16"-18 x 1" bolts.

ATTENTION:

For the front-most, driver side mounting hole, use the supplied M8-1.25 x 85mm bolt to bolt through the Trail Kitchen, bolt-in bracket and into the rivet nut located in the floor of the Jeep.



MORryde

HEAVY. DUTY. ADVENTURE.

www.MORryde.com • 574.293.1581