



# X-BRACE 5<sup>TH</sup> WHEEL STABILIZER


SP54-180

## QUALIFICATION GUIDE



### STEP 1

The side to side area between mount brackets must be clear to allow braces to freely move into the retracted position.

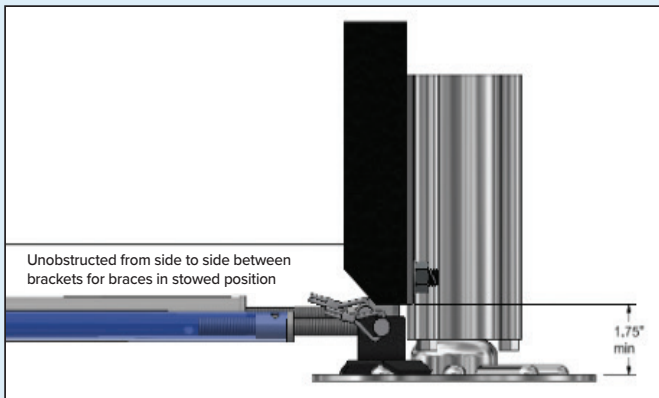

### STEP 2

The jack body must have mount holes for 1/2" bolts and be spaced 4 1/2" apart.

### STEP 3

The foot plate (below pic) must be 9" in diameter with raised ribs for the flat head screw to sit flush with the bottom of the plate.




### STEP 4

The upper flat portion of the foot plate must be at least 1 3/4" below the jack mount plate when the jacks are fully retracted.

### STEP 5

Extrusion must have at least one set of mounting holes located below the jack bracket.

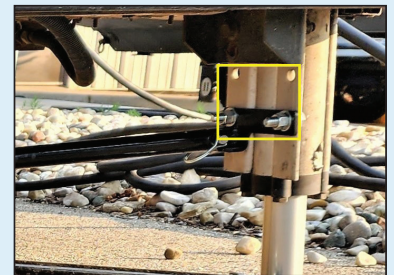

Version 2



Above. Beyond. Always.

574.293.1581 • [www.MORryde.com](http://www.MORryde.com)