


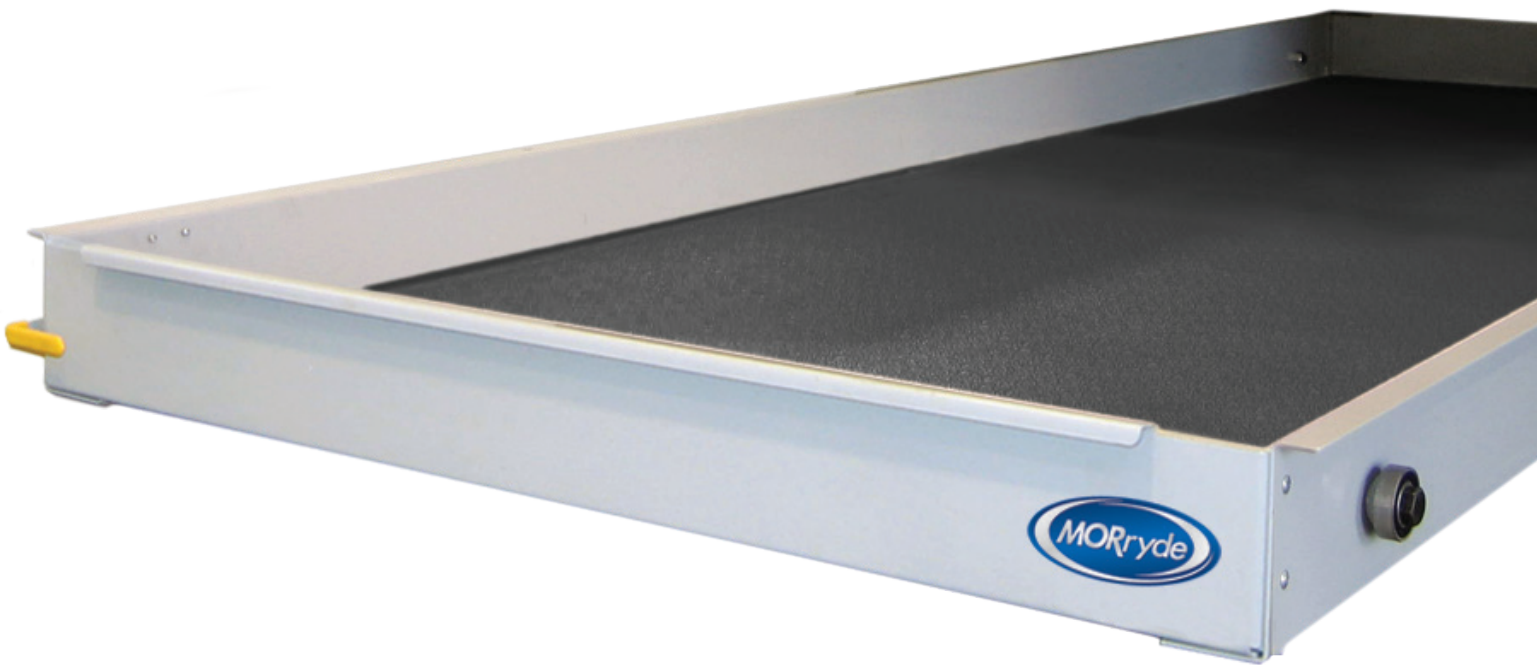

CARGO TRAY

80% EXTENSION

INSTALLATION INSTRUCTIONS



Above. Beyond. Always.

CARGO TRAY | 80% EXTENSION

INSTALLATION INSTRUCTIONS

INTRODUCTION

The MORryde Cargo Tray is designed to provide easy access to hard-to-reach compartments of the RV. These instructions apply to all MORryde Cargo Tray part numbers starting with **CTG80**.

PARTS LISTING

Item	Qty	Description
1	1	Cargo Tray & Frame
2	1	Universal Hardware Pack

Tools Required:

- Tape Measure
- Screw Gun



NOTE: Hardware is located in the top of the box, inside the middle foam rail.

PREPARATION

General Safety & Warnings:

⚠ WARNING

Read and understand all instructions and warnings prior to installation.

⚠ WARNING

Failure to follow the instructions and heed the warnings of this document may result in injury, damage to the trailer and/or property, and/or voidance of the product warranty.

⚠ WARNING

You are personally responsible for following safe installation procedures and completing appropriate safety checks.

⚠ WARNING

Due to the variety of installation applications, mounting clearances, and surface materials, a generic hardware pack is supplied for convenience. It is at the discretion of the installer to choose the hardware that best suits specific needs. MORryde does not take ownership of any wrongly installed trays or damage that may result from a wrongly installed tray.

⚠ WARNING

Heavy lifting is required. Use a second person for a team lift.



Above. Beyond. Always.

CARGO TRAY | 80% EXTENSION

INSTALLATION INSTRUCTIONS

INSTALLATION


STEP 1

Verify the MORryde Cargo Tray clears the baggage door. With a second person, lift the railing and tray into the unit before cutting the banding. Ensure that the baggage door opens and closes without interference.



STEP 2

While the tray is sitting inside the unit, cut the banding and slightly extend the tray to ensure it clears all sides of the compartment opening.

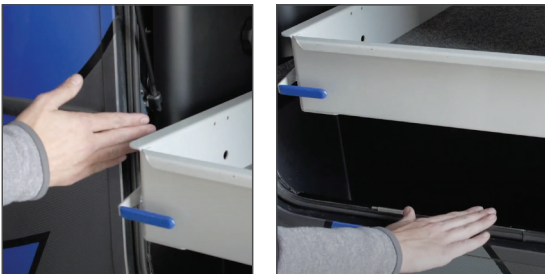

⚠ WARNING

Do not fully extend the tray where the majority of the weight is outside the compartment. Doing so could result in damage to the tray or personal injury.

STEP 3

Use a tape measure to center the tray in the middle of the doorway. Measure both sides of the tray to ensure it is centered and measure corner to corner to check squareness.



CARGO TRAY | 80% EXTENSION

INSTALLATION INSTRUCTIONS

STEP 4


After finalizing the location of the tray, ensure that there is no plumbing or wiring underneath the designated location before proceeding with the installation. If needed, contact the manufacturer for these details.

STEP 5

Release the tray and slowly pull it out a few inches to expose the mounting locations on one side.

STEP 6

Use the provided hardware to secure each corner of the tray frame assembly.

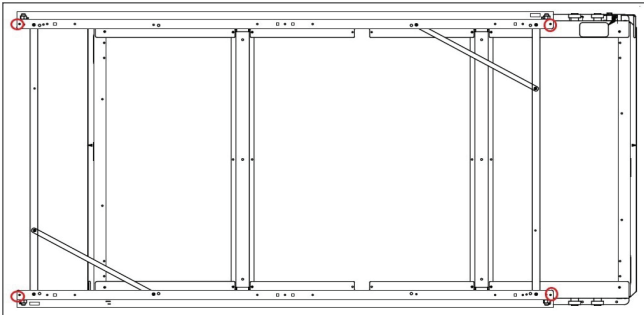


STEP 7

Once the corners are secured on one side, push the tray back into the locked position. Release the tray on the opposite end and slowly pull it out a few inches to expose the mounting locations and secure with hardware.

STEP 8

Secure the tray in place using a minimum of four screws per side. Evenly space the screws throughout the designated hole locations.

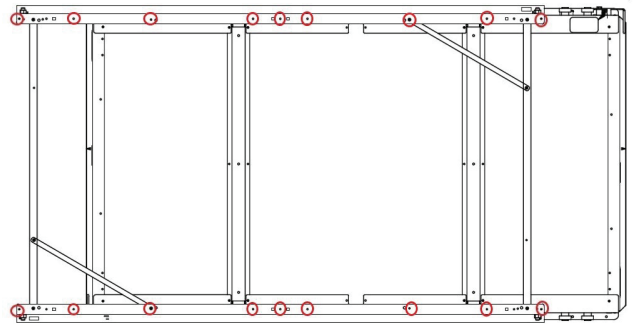

STEP 9

Fully open then close the tray into the locked position to double check the installation and the functionality of the tray.



Above. Beyond. Always.

574.293.1581 • MORryde.com

