

QUALIFIER



Above. Beyond. Always.

WHICH **STEP** IS **RIGHT FOR YOU?**

Use the space below to document your measurements.



THRESHOLD



STEP HEIGHT



HINGE PLATE



DOOR WIDTH



A New Generation of

STEP ABOVE[®]
by MORryde

QUALIFIER

Step 1

MAKE SURE YOUR UNIT IS LEVEL TO ENSURE ACCURATE MEASUREMENTS.




THRESHOLD

Make sure the rise of your threshold is between 5/8" and 3/4". If it is greater or less than either of these measurements, the door may not close properly.

Step 2

HINGE PLATE

You must have a gap of 3/8" from the bottom of your entry and screen doors to the top of the threshold to allow room for the hinge plate. Without this clearance, your door will not have sufficient room to close while the steps are down.

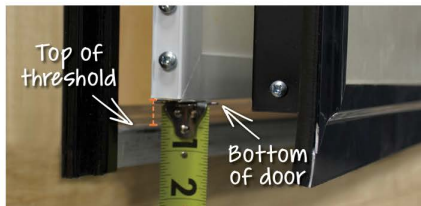

If your unit doesn't meet the specifications in STEP 1 or STEP 2, modifications WILL NEED to be made. Please call the MORryde Sales department for further assistance at 574-293-1581.

OTHER ITEMS TO CONSIDER...

DOOR JAMB TRIM



If there is trim on the back side of the door jamb that protrudes, it will interfere with the latch on the step. The trim will need to be notched 1/4" - 1/2" to accommodate the latch.

STRUTS




If the door has a strut that prevents it from opening all the way, the step will hit the door. The strut must be removed for proper step installation.

DOORWAY



There must be at least 9" of clearance on the inside of the doorway for the StepAbove to be able to fold up correctly.

Step 3

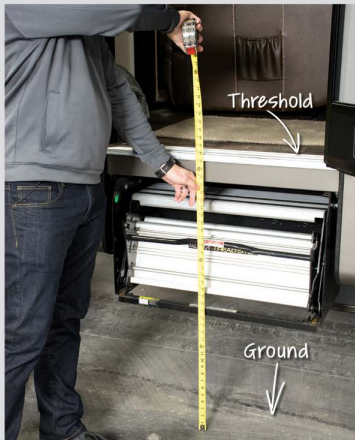

STEP HEIGHT

Find your step height by measuring from the top of the threshold to the ground.

Step 4




DOOR WIDTH

Find your door width on the factory label located on the side or edge of the door.

If there is no label, measure inside at the base of the door from flange to flange and refer to the **Fit Chart** for the door width. Keep in mind that the flange to flange measurement needed is the narrowest part of the entry door.



SKIRTING

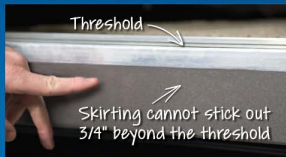

The skirting below the threshold cannot stick out more than 3/4\".

HANDRAIL



If there is anything on the left side of the entrance of your door within 33\", you will need to remove the handrail before stowing the steps.

AFTERMARKET ACCESSORIES

Aftermarket accessories such as a storm door or a grab handle could cause interference with the step and may need to be removed or altered for proper installation of the StepAbove.


STEPABOVE FIT CHART

	PART NUMBER *	STEP HEIGHT	STEP RISE	DOOR WIDTH Size from Factory Label	—OR—	DOOR WIDTH Size from Flange to Flange
2 STEP	STP-201	25" – 29.5"	9"	24"		21.75" – 22.25"
	STP-202	25" – 29.5"	9"	26" – 28"		23.75" – 26.25"
	STP-203	34" – 37"	9"	24"		21.75" – 22.25"
	STP-204	30" – 33.5"	8"	24"		21.75" – 22.25"
3 STEP	STP-206	30" – 33.5"	8"	26" – 28"		23.75" – 26.25"
	STP-207	34" – 37"	9"	26" – 28"		23.75" – 26.25"
	STP-208	30" – 33.5"	8"	30" – 32"		27.75" – 30.25"
	STP-209	34" – 37"	9"	30" – 32"		27.75" – 30.25"
	STP-212	37.5" – 42"	8"	26" – 28"		23.75" – 26.25"
4 STEP	STP-213	37.5" – 42"	8"	30" – 32"		27.75" – 30.25"

STEPABOVE® ACCESSORIES



STORAGE BOX
SP54-099

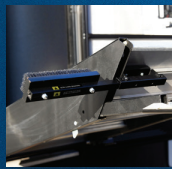

STEP BRUSH
STP54-062



LATCH EXTENDER
SP54-200



SAFE-T-RAIL
SP56-469

Short: SP56-573
Motorhome: SP56-632



3 STEP HANDRAIL
STP214-121H

4 STEP HANDRAIL
STP214-120H